

SAVOIR BEDS

SINCE 1905

Attaching a headboard to a base

STEP 1

Fit headboard bolts so that 4.5 cm / 1¾" is exposed.




STEP 2

Do this for all bolt positions.



STEP 3

Gently lower the headboard slots onto the exposed bolts.

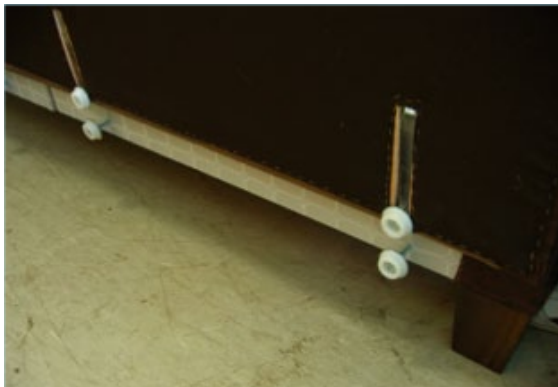

STEP 4

Tighten the headboard bolts to fix the headboard in place. Ensure the bottom of the headboard is level with the bottom of the base.



For more information about care and set-up visit the [website](#).